


Top View

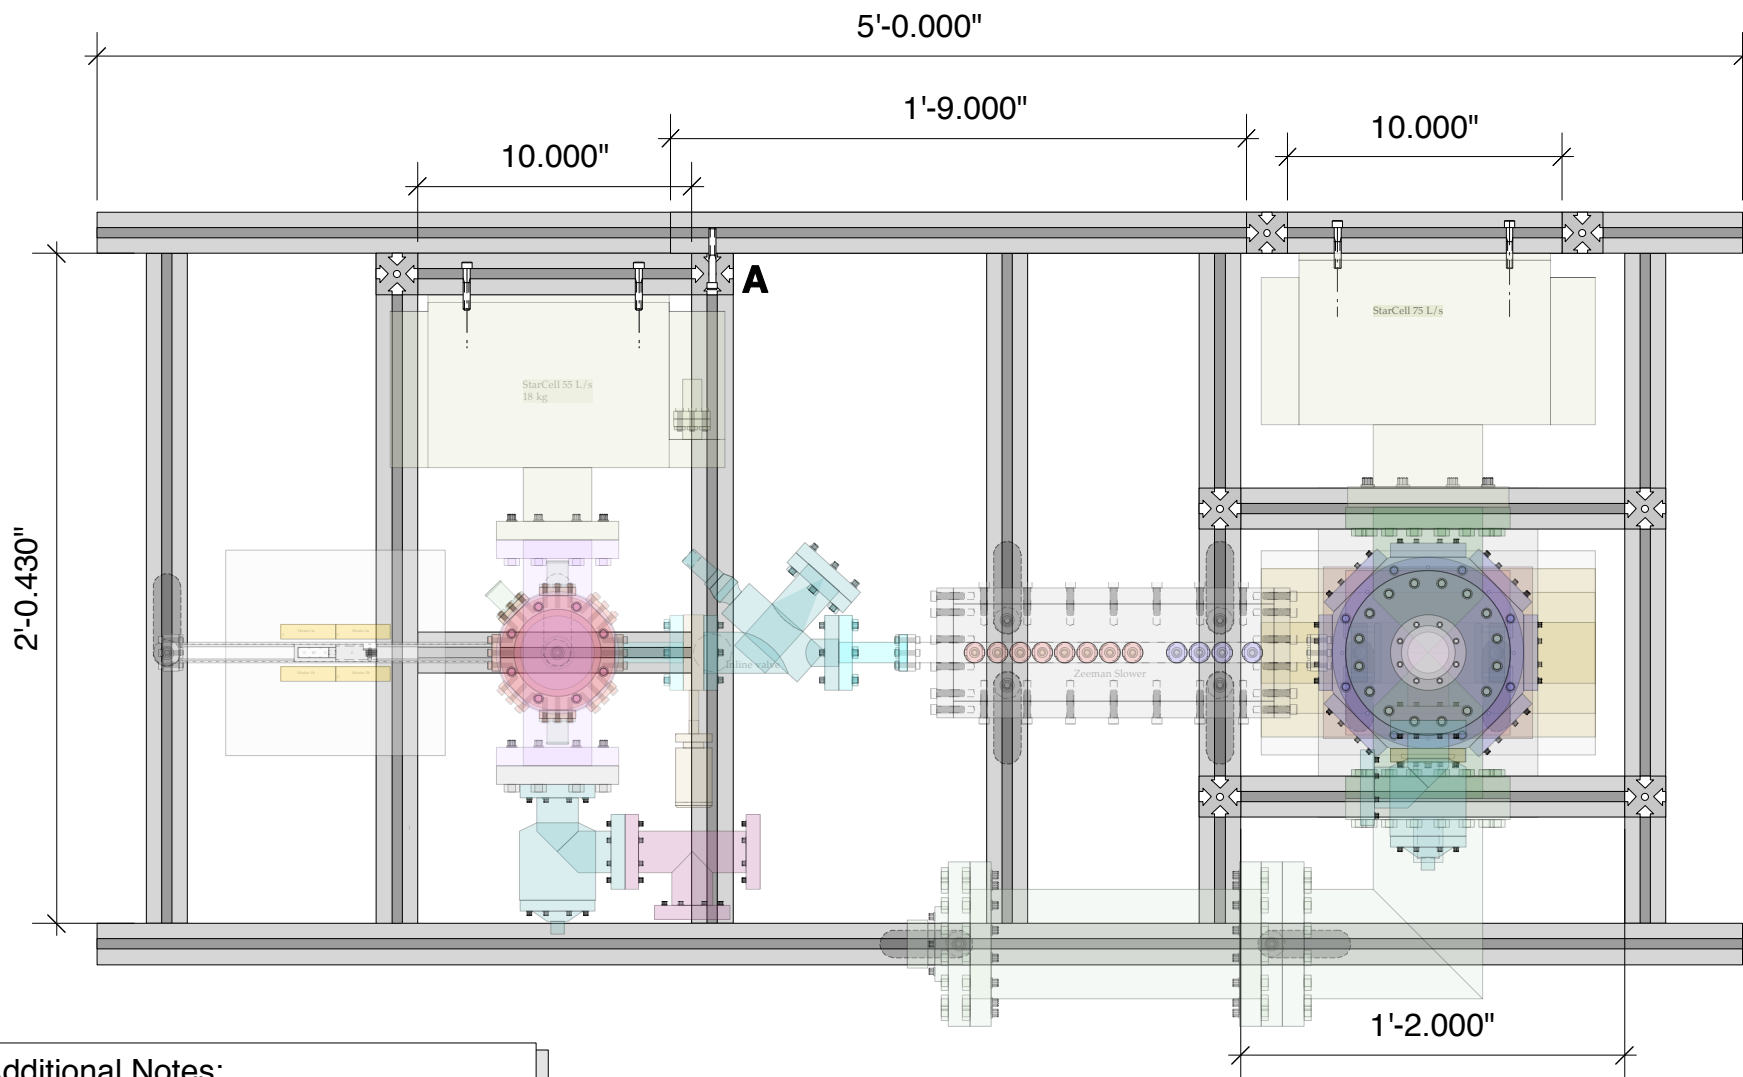


Additional Notes:

All connections are butt-joined,
Bar End to T-slot, except where noted.

A: Bolted; Drill hole to T-Slot
We will need to drill this ourselves
once we know its actual position.

Tobias Brown-Heft
University of Oregon
541.346.5863
tobiasb@uoregon.edu

Back View

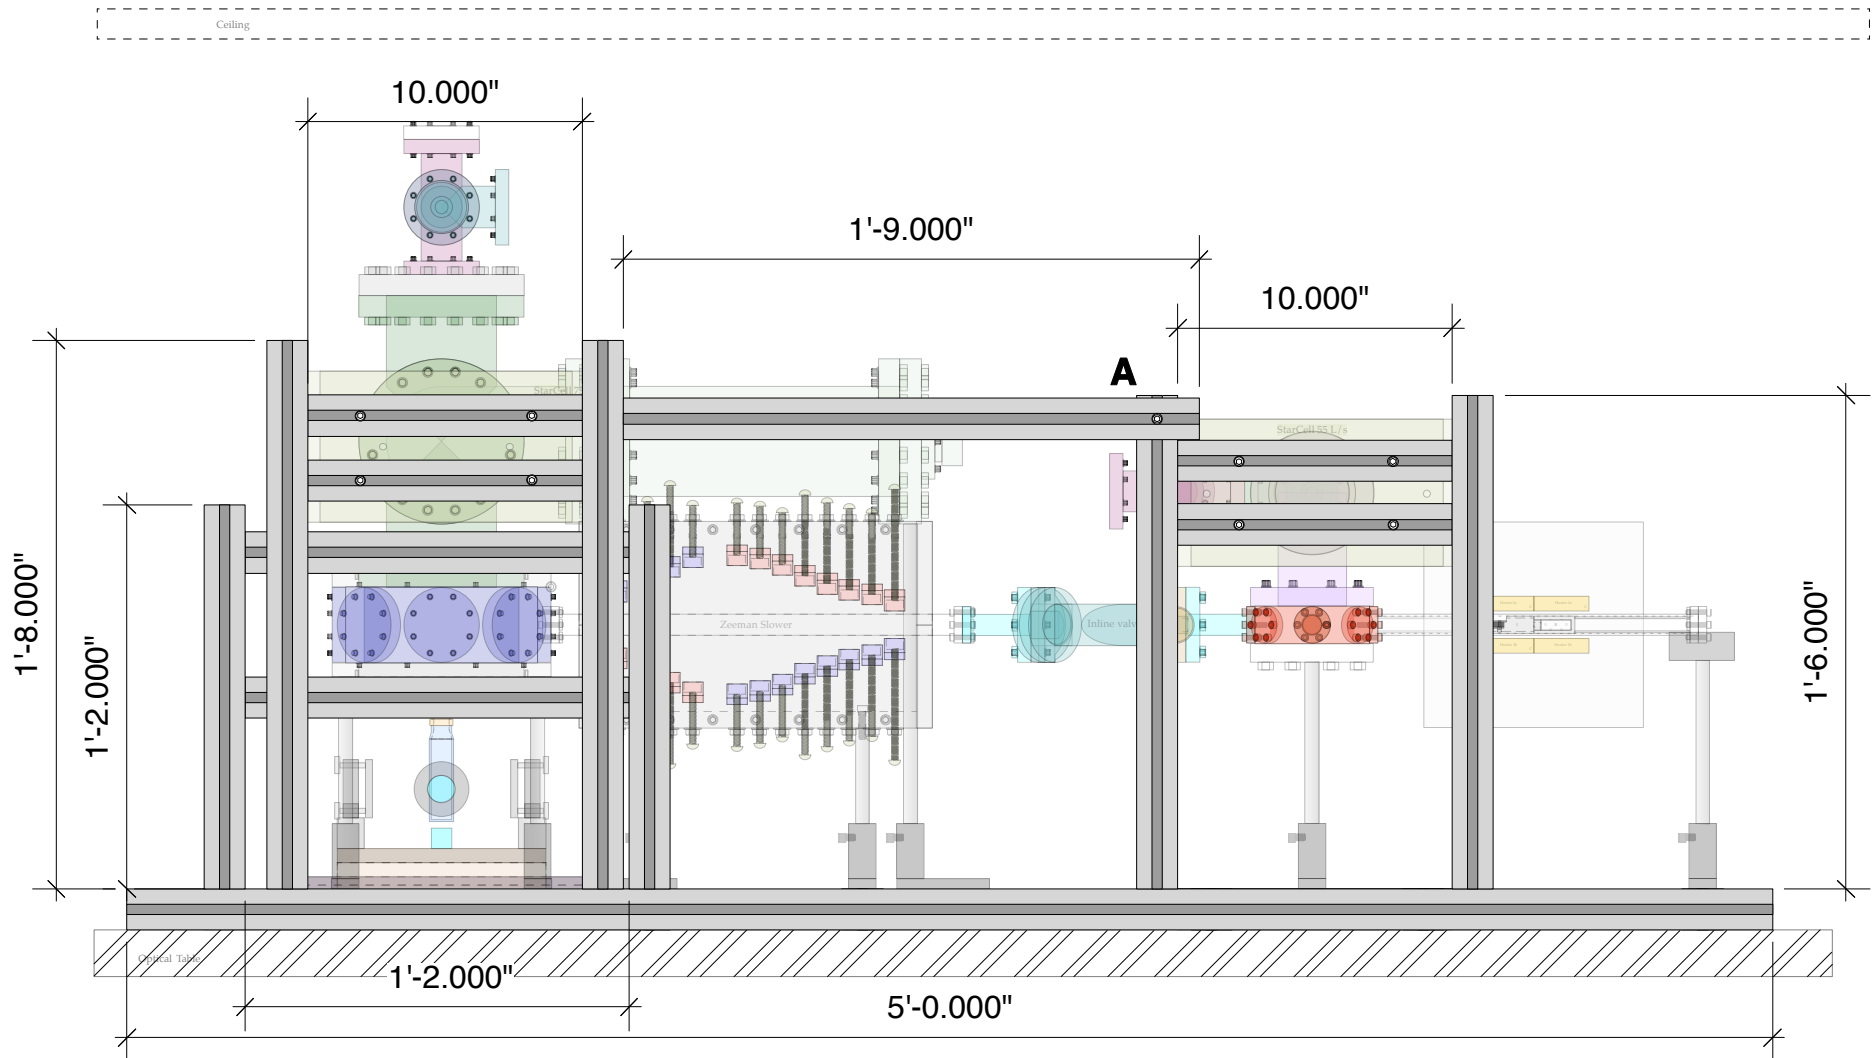


Additional Notes:

All connections are butt-joined,
Bar End to T-slot, except where noted.

A: Bolted; Drill hole to T-Slot
We will need to drill this ourselves
once we know its actual position.

Tobias Brown-Heft
University of Oregon
541.346.5863
tobiasb@uoregon.edu

Front View

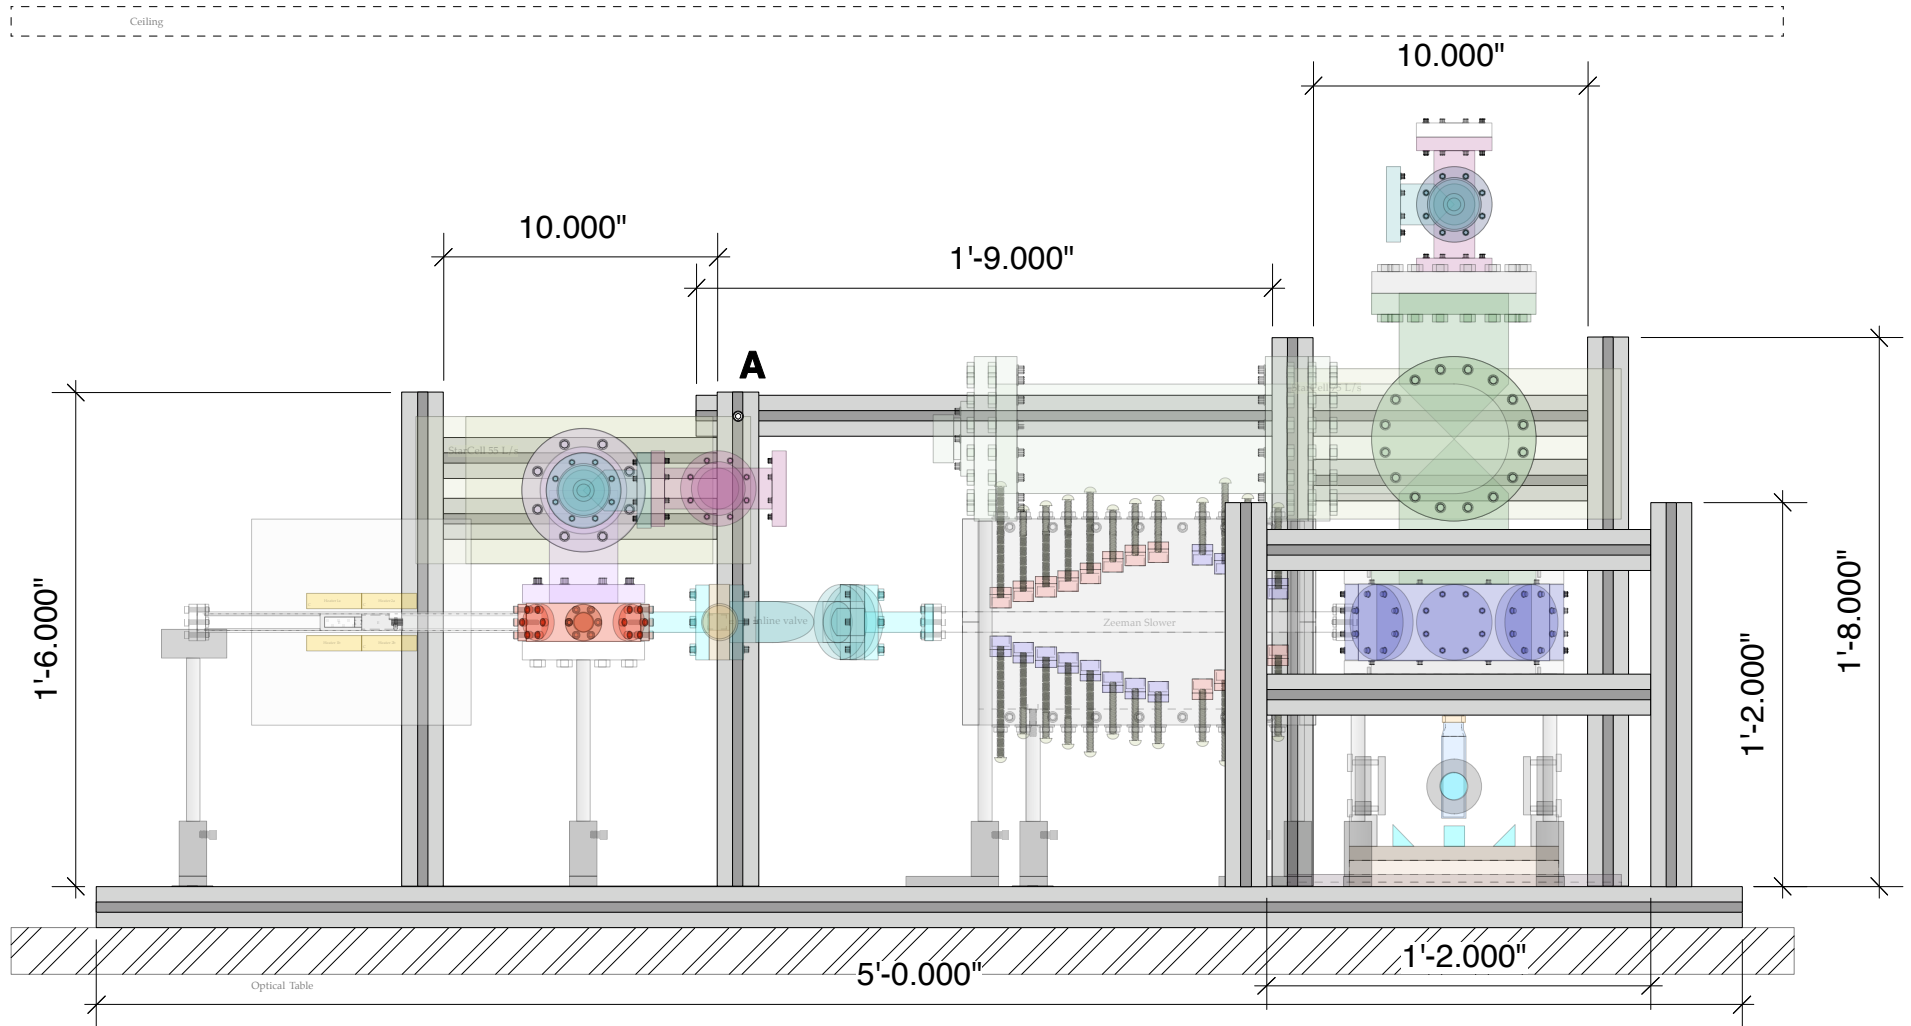


Additional Notes:

All connections are butt-joined,
Bar End to T-slot, except where noted.

A: Bolted; Drill hole to T-Slot
We will need to drill this ourselves
once we know its actual position.

Tobias Brown-Heft
University of Oregon
541.346.5863
tobiasb@uoregon.edu

Right Side View

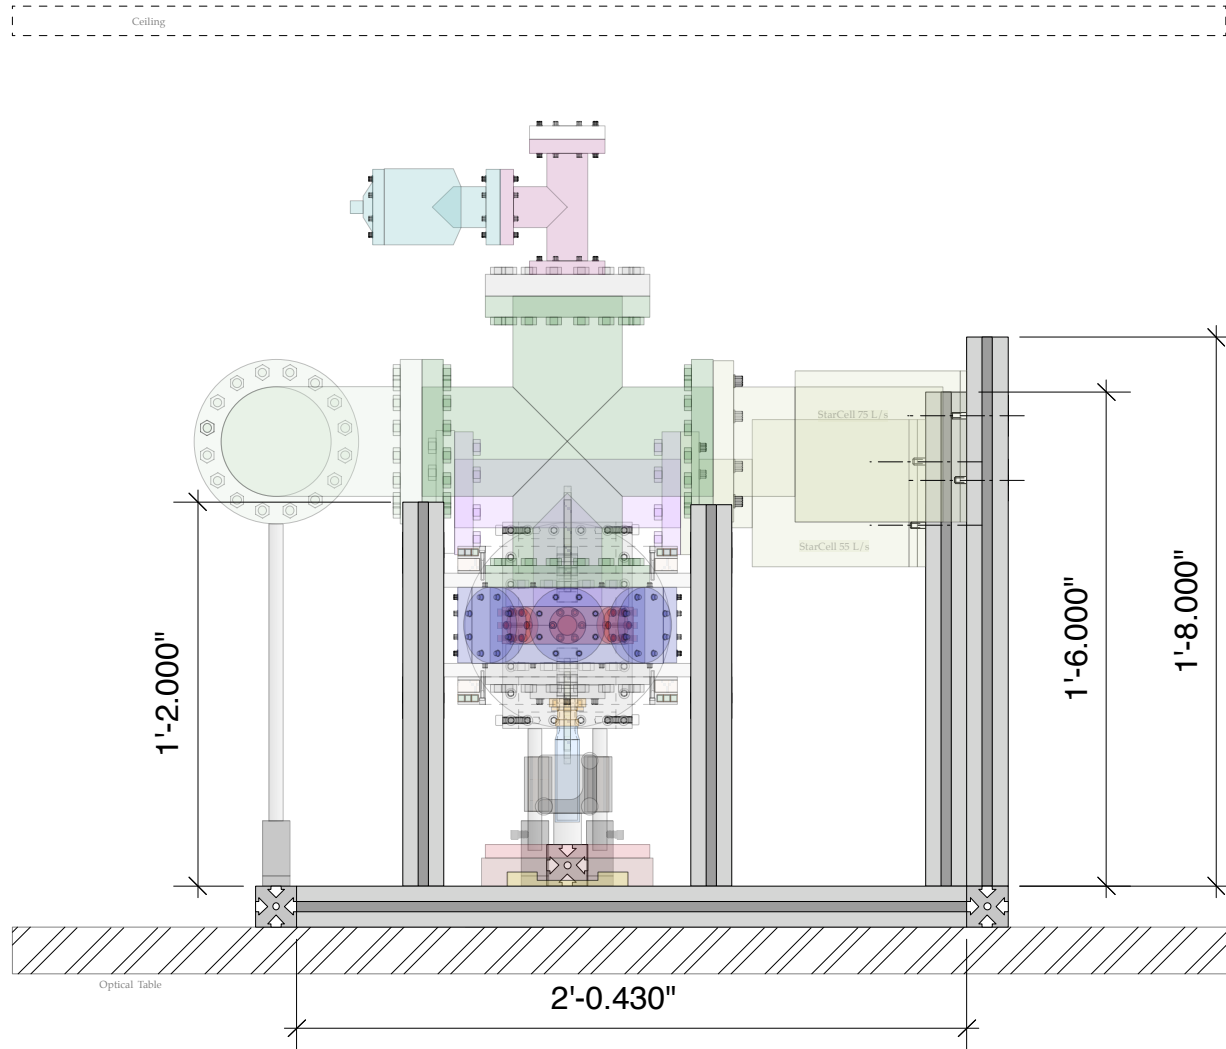

Additional Notes:

All connections are butt-joined,
Bar End to T-slot, except where noted.

A: Bolted; Drill hole to T-Slot
We will need to drill this ourselves
once we know its actual position.

Tobias Brown-Heft
University of Oregon
541.346.5863
tobiasb@uoregon.edu